

# Operations Display Quick Installation Guide

## Items Included




## Tools Required




### 1. Choose Installation Location

Locate where to mount or set the Display considering the fact that the AC power cord is 9 ft. (2.74 m) long. The AC requirement is 100-240 VAC, 50/60 Hz.

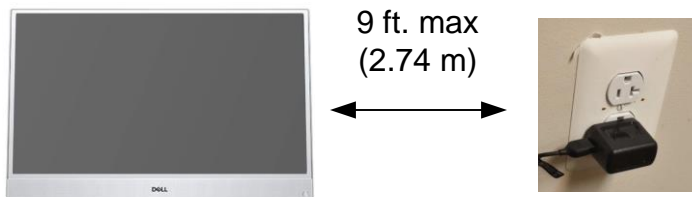

### 2. Mount the Display on Wall (Option 1)

Using the wall mount bracket mounted to the back of the Display, mount the Display on the wall.

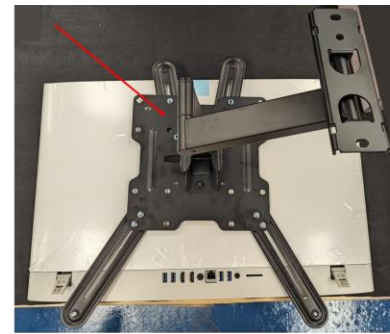


### 3. Mount the Display on a Desk (Option 2)

Unscrew the wall mount bracket, mount the desk stand to the Display and set it on a horizontal surface.



### 4. Connect Communication Cables

Connect one USB end into the Controller, connect the other USB end into the back of the Display.

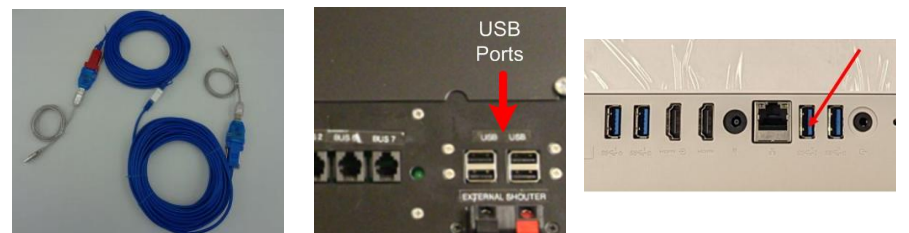

### 5. Connect AC Power

Plug the AC power cord into a receptacle and plug the other end into the back of the Display



### 6. Turn on the Display

On the bottom of the Operations Display, press the Power button to turn on the Display.



### 7. System Start Up

Wait 30 seconds for the app to run and load the pool, graph, action, and alert information on the screen.



### 8. Troubleshooting

Check the System Information screen under Settings on the controller. Be sure that the Software Version of the Controller is 6.51 or greater.

If there is no communication, check the distance to the control box. It should be no more than 100 ft. (30.5 m). Distances from 100 ft. (30.5 m) to 1000 ft. (305 m) require a wireless modem kit.

Check that all cables are securely connected. HDMI cables should be no more than 150 ft. (45.8 m). HDMI cable must be connected to the HDMI port next to the power cord on the back of Display.