## Instant Install™ Injector System


## INJ-P18-345

## RECOMMENDED LAYOUT FOR BATTERY TYPE

Approx. Tray Size **18 Cell-11 Plate** 

**Notes:** 1. Remove any twists in the tubing prior to installation.

- 2. Tubing can run either over or under the cables depending on clearances.
- 3. Install tubing under cables where cable swing is possible.
- 4. Be sure all cables are tied down with wire ties to prevent system damage.

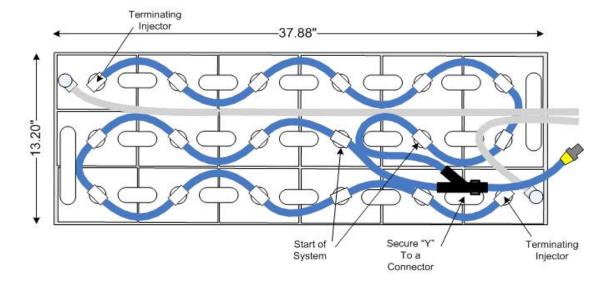

Phone (215) 616-0390

Website www.phlsci.com

(215) 616-0500