Instant Install[™] Injector System


RECOMMENDED LAYOUT FOR BATTERY TYPE

INJ-P24-785

Approx. Tray Size 44.50" x 41.50" 24 Cell-31 Plate

Notes: 1. Remove any twists in the tubing prior to installation.

- 2. Tubing can run either over or under the cables depending on clearances.
- 3. Install tubing under cables where cable swing is possible.
- 4. Be sure all cables are tied down with wire ties to prevent system damage.

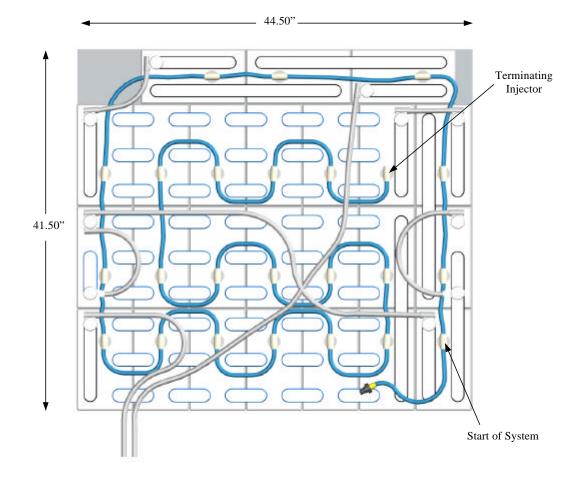

Philadelphia Scientific

207 Progress Drive Montgomeryville, PA 18936 Phone (215) 616-0390 Fax (215) 616-0500 Website www.phlsci.com