Instant Install™ Injector System

RECOMMENDED LAYOUT FOR BATTERY TYPE


INJ-P18-896

Approx. Tray Size 38.30'' x 38.25''

18 Cell-33 Plate

Notes: 1. Remove any twists in the tubing prior to installation.

- 2. Tubing can run either over or under the cables depending on clearances.
- 3. Install tubing under cables where cable swing is possible.
- 4. Be sure all cables are tied down with wire ties to prevent system damage.

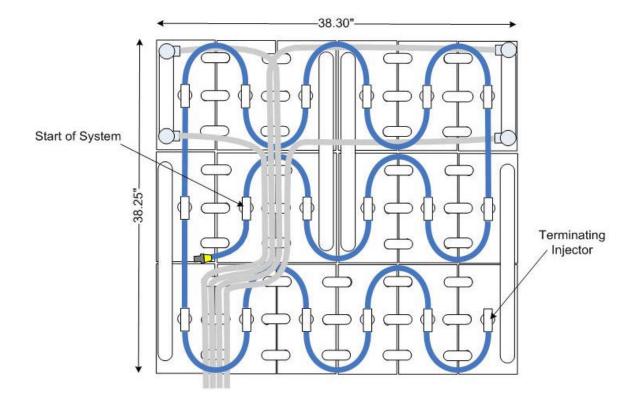

Philadelphia Scientific

207 Progress Drive Montgomeryville, PA 1893 Phone (215) 616-0390 Fax (215) 616-0500 Website www.phlsci.com