## Instant Install™ Injector System

**RECOMMENDED LAYOUT FOR BATTERY TYPE** 


INJ-P24-905

## Approx. Tray Size 44.79'' x 38.32'' 2

## 24 Cell-29 Plate

Notes: 1. Remove any twists in the tubing prior to installation.

- 2. Tubing can run either over or under the cables depending on clearances.
- 3. Install tubing under cables where cable swing is possible.
- 4. Be sure all cables are tied down with wire ties to prevent system damage.

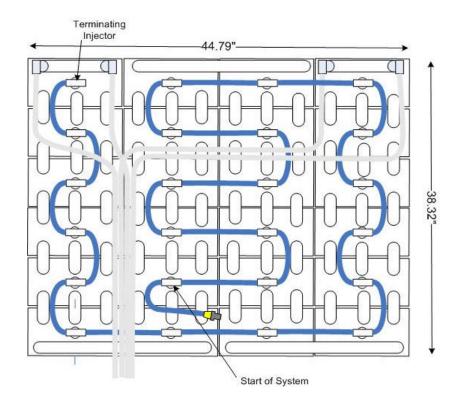

Philadelphia Scientific

207 Progress Drive Montgomeryville, PA 1893 Phone (215) 616-0390 Fax (215) 616-0500 Website www.phlsci.com